


# desire

## MANTRA

For warranty information, latest products, and news visit us at:  
[nsnovelties.com](http://nsnovelties.com)

### PLAY


- \* Press & hold power button on Mantra for 2 seconds until indicator light blinks to enter standby mode.
- \* Quick press power button to cycle through speeds/functions.
- \* Press & hold power button for 3 seconds until indicator light turns off to power off Mantra.

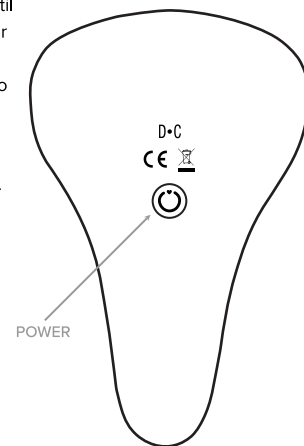

### SET UP


#### PLAYING WITH REMOTE

- \* To use the remote, put the device in standby mode.
- \* Quick press the top/bottom button to activate and cycle through speeds/functions.
- \* Press power button to power off Mantra.

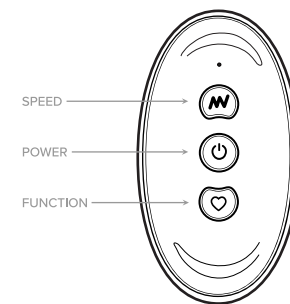

### CHARGE

- \* The light will blink while the device is charging.
- \* The light will become solid once the device is fully charged.

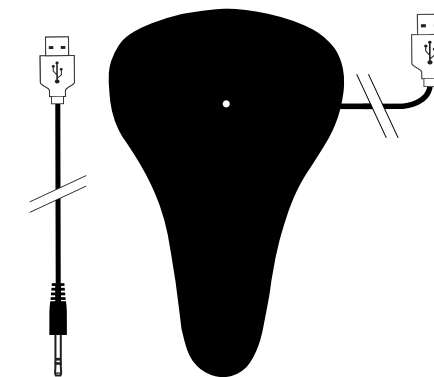

### CARE

- \* Turn off device when not in use.
- \* Do not operate the device while charging.
- \* Please follow the charge times indicated in the device specifications.
- \* Wash after each use with liquid anti-bacterial soap and water.
- \* Pat dry with a cotton towel and allow to air dry completely.

**Product Dimensions:** 4.21 x 2.64 x 1.46 (in)  
Remote: 2.83 x 1.54 x 1.02

**IPX Rating:** IPX-5 Low pressure water resistant,  
Remote: IPX-5 Low pressure water resistant

**Battery:** Rechargeable, Remote: AAA

**Charge Time:** Do not exceed 60 minutes

**Run Time:** 40 minutes

**Modes:** 12

