

desire

DEMURE

For warranty information, latest products, and news visit us at:
nsnovelties.com

CARE

- * Turn off device when not in use.
- * Do not operate the device while charging.
- * Please follow the charge times indicated in the device specifications.
- * Wash after each use with liquid anti-bacterial soap and water.
- * Pat dry with a cotton towel and allow to air dry completely.

Product Dimensions: 3.03 x 3.5 x 1.38 (in)

IPX Rating: IPX5 Low pressure water resistant

Battery: Rechargeable

Charge Time: Do not exceed 30 minutes


Run Time: 50 minutes

Modes: 10



PLAY

- * Press & hold power button for 2 seconds until indicator light blinks to power on and enter standby mode.
- * Quick press button to cycle through speeds/functions.
- * Press & hold power button for 2 seconds to power off.

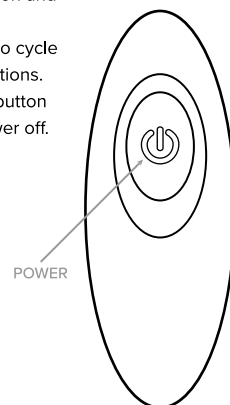

CHARGE

- * The light will blink while the device is charging.
- * The light will become solid once the device is fully charged.

