



VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.



CHARGING INSTRUCTIONS

This vibrating bullet arrives with a partial charge, so it is recommended to charge toy before use. Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about 90 minutes, and subsequent charges will also take about 90 minutes to complete. The indicator light will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time. Charge lasts for about 60 minutes of play time on the lowest vibration level, and about 30 minutes of play time on the highest level.

Toy vibration slows before stopping completely when charge is fully depleted.

This toy comes with a Li-ion polymer rechargeable battery and operates at 3.7V. It vibrates at a sound level of 40 db.

INSTRUCTIONS FOR USE

This toy has a simple, one-button control.

To turn toy on, press the button for at least 3 seconds. The LED light will turn on, and the toy will start with its first pattern, a low vibration. Once toy is turned on, press the same button to cycle through 9 different patterns.

To turn toy off, press button for at least 3 seconds. LED light will turn off, then toy will power off.



USB RECHARGEABLE

