

Product Specifications:

Category: Vibrator
User: Women
Material: Silicone and ABS hard plastic
Finish: PU Coated
Size: H:191.5mm W:37.7mm D: 46.8mm
Battery: Rechargeable Battery
Voltage: 2 x 3.7V Rechargeable Battery
Number of Vibrations: 7 Function and 5
Speed
User time: At highest level about 50
minutes minutes Sound Level: About 58 db

CHARGING INSTRUCTIONS

CHARGING INSTRUCTIONS
This vibrator arrives with an 50% charge, so it can be used immediately or you can charge it to 100% before use.
Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about 1.5 hours to go from 50% to 100%, and subsequent charges with a completely depleted battery will take about 2.5 hours to complete.

The indicator light will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 2 hours of play time on the lowest vibration level, and about 50 minutes of play time on the highest level.
Toy vibration stops completely when charge begins to deplete.

INSTRUCTIONS FOR USE

INSTRUCTIONS FUR USE
To turn toy on, press the Power Button
(lower button) for at least three
seconds. The light will turn on and toy
will begin vibrating at its first function at
he lowest speed

will begin vibrating at its first function at the lowest speed.
Once toy is turned on, use the Function Button (top button) to cycle through 7 different functions. Within each function, use the Power Button (pressed quickly) to reach 5 different speeds per function.
To turn toy off, press Power Button for at least 3 seconds. The light will turn off to indicate toy has powered down.