

Product Specifications:

Material: Silicone & ABS Plastic Battery: Polymer lithium battery Voltage: 3.7 Number of Vibrations: 7 User time: 40-60 minutes Sound Level: less than 51 db

CHARGING INSTRUCTIONS

This vibrator arrives with high partial charge, so it is not necessary to fully charge it before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into the toy's input.

Initial charge will take about 2 hours to complete, and subsequent charges will also take about 2 hours to complete.

The indicator light will flash while device is charging and turn solid when

toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time. Charge lasts for about 60 minutes of play time on the lowest level of vibration, and about 40 minutes on the highest level.

This toy operates at a sound level of 51 db at a voltage

of 3.7V.

INSTRUCTIONS FOR USE

This toy has a simple one-button control on the toy and on the remote control. Use this Power Button to perform all functions on either the toy or the remote.

Use the Power Button to turn the toy on by pressing it for at least 2 seconds. It will begin

vibrating at the first lowest pattern. Press the Power Button again more quickly to cycle through 7 vibrations and bead rotation speeds in total. Vibration and bead rotation work together. To turn toy off, press the Power Button for at least 2 seconds.

USB RECHARGEABLE