

zerotolerancetoys.com

ZERO TOLERANCE



Product Specifications:

Material: Silicone + ABS Plastic
Battery: Toy: Rechargeable Lithium Polymer battery, 3.7V/140mAh
Remote: Rechargeable Lithium Polymer battery, 3.7V/50mAh
Voltage: 3.7V
Number of Vibrations: 9 patterns
User time: 1-1.5 hours
Sound Level: <40dbs

CHARGING INSTRUCTIONS

This vibrator arrives partially charged, so it is recommended to fully charge before use. Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input. Initial charge will take about 90 minutes, and subsequent charges will also take about 90 minutes to complete.



The LED light will flash while device is charging and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 90 minutes of play time on the lowest vibration level, and about 60 minutes of play time on the highest level.

This toy operates at a sound level of 40db and a power level of 3.7V.

Toy uses a rechargeable lithium polymer battery, 3.7V/140mAh
Remote control uses a rechargeable lithium polymer battery, 3.7V/50mAh

INSTRUCTIONS FOR USE

This toy can be operated with or without the remote control. Please note that both motors are controlled together.

With the remote control:
Turn the toy on by pressing the Power Button on the remote for at least 3 seconds. The toy will turn on and begin in its lowest vibration mode.

Press the Function Button to cycle through 9 speeds and functions of vibration.

Turn the toy off by pressing the Power Button for at least 3 seconds.

You can also turn on the toy directly with its own Power Button, and then control the speed from the remote control after turning the remote on separately.

Without the remote control:
Turn the toy on by pressing the Power Button for at least 3 seconds.
Use the same Power Button to cycle through 9 speeds and functions of vibration.

Turn the toy off by pressing the Power Button for at least 3 seconds.
You can start the toy without the remote control, and then control it from the remote control after turning the remote on separately.

ATTACH USB CHARGER TO PRONGS

USB RECHARGEABLE

USB RECHARGEABLE