



VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.

CHARGING INSTRUCTIONS

This vibrator arrives with a partial charge of about half capacity, so it is recommended to charge before first use. Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about 90 minutes, and subsequent charges will take about 90 minutes to complete. The LED light will flash on the toy while device is charging and remain solid when fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 60 minutes of play time on the lowest vibration level, and 30-35 minutes of play time on the highest level.

This toy operates at a sound level of 45db and a power level of 3.7V with a 240mAh battery.

INSTRUCTIONS FOR USE

This toy operates with an easy-to-use 1-button control directly on the toy, at the base of the handle.

Turn the toy on by pressing the button for at least 1.5 seconds. The toy will turn on and begin vibrating at the first lowest speed. The LED indicator light will flash once and then stay on, entering Standby mode.

With the toy in Standby mode, press the button again more quickly to exit Standby mode and engage the motor.

The toy will begin vibrating at its lowest level. Press the button again to cycle through 10 vibration speeds and functions.

Turn the toy off by pressing the button for at least 1.5 seconds. The light will turn off and the toy will stop vibrating.

