

**Product Specifications:** 

Material: Silicone + ABS Battery: Lithium battery Voltage: 170ma

Number of Vibrations: 10

User time: 60 minutes Sound Level: 48-50 Db

## CHARGING INSTRUCTIONS

This vibrator arrives with a low partial charge, so it is recommended to charge the toy for at least 60 minutes before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about 60 minutes, and subsequent charges will also take about 60 minutes to complete.

The indicator light will flash while device is charging and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 60 minutes of play time at the highest level of vibration.

This toy operates at a sound level of between 48 - 50db with a rechargeable 170mAh lithium battery.

INSTRUCTIONS ON USE
This toy has a convenient 1-button control at its base

INSIKUCIIONS ON USE
This toy has a convenient 1-button control at its base.
To turn toy on, press the Power Button for at least 2 seconds. The light will turn on and toy will begin vibrating at its first lowest frequency.
Once the toy is on, press the Power Button again, a single time for each new speed or function for a total of 10.

To turn toy off, press Power Button for at least 2 seconds.

onds.

USB RECHARGEABLE
CHARGER
HERE

DAVLOVE