

## **Product Specifications:**

Material: Silicone + ABS Plastic Battery: Rechargeable Li-ion battery 220mAh Voltage: 220mAh Number of Vibrations: 7 User time: 100min in highest level,150mins in lowest level. Sound Level: <60db

## CHARGING INSTRUCTIONS

This vibrator arrives with a partial charge of about 30%. It is recommended to use up this power before fully charging the toy for the first time, and to fully deplete the battery for the first three charges. To charge, connect the USB plug into the USB port of your computer or other output and the double magnetic prong end of the DC charger into input at base of toy.

Initial and subsequent charges will take about 60 minutes to complete. The indicator light will flash while device is charging and remain solid when toy is fully charged. There is no danger of battery

damage by overcharging, but it's recommended not to overcharge for long periods of time. Charge lasts for about 100 minutes of play time at

Charge lasts for about 100 minutes of play time at the highest level of vibration and about 150 minutes at the lowest level.

This toy operates at a sound level of between 60db with a rechargeable 220mAh lithium battery.

## INSTRUCTIONS FOR USE

HERE

This toy has a convenient 1-button control at its base.

To turn toy on, press the Power Button for at least 3 seconds. The lights will turn on and toy will begin vibrating at its first lowest frequency.

Once the toy is on, press the Power Button again, a

Once the toy is on, press the Power Button again, a single time for each new speed or function for a total of 7.

To turn toy off, press Power Button for at least 3 seconds.

