



VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.

CHARGING INSTRUCTIONS: This vibrator arrives with low partial charge, so it is recommended to fully charge before use. Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial and subsequent charges will take about an hour to complete.

The indicator light will flash on toy while device is charging and become solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 70 minutes of play time on the lowest level of vibration, and about 30 minutes on the highest level.

This toy operates at a sound level of less than 40db with a 240mAh lithium battery at a voltage of 3.7V.

The remote control is also USB rechargeable. Plug in the provided cable to a USB port in your computer or other output and the other end into the remote control's input port. Charge will take about an hour.



INSTRUCTIONS FOR USE: This toy can be operated directly with the button at its base, or with the two buttons on its remote control. Important note: You cannot turn the toy ON or OFF with the remote control. Use the button directly on the toy to power it on.

OPERATE WITH TOY DIRECTLY: Press the Power Button at toy's base for at least 3 seconds to turn toy on.

Press the Power Button again more quickly to cycle through 9 different vibration speeds and functions.

Once the toy is on, you may power on the remote and use its buttons to operate vibrations and functions separately.

To turn toy off, press Power Button for at least 3 seconds.

OPERATE WITH REMOTE CONTROL: Once the toy is on (by using the button at its base), press the Power Button for at least 3 seconds to turn on the remote control.

Use the Function Button on remote to cycle through 9 different vibration speeds and functions.

Press the Power Button again for 3 seconds to put the remote and toy in standby mode (no matter what speed it's on), during which time you can engage the toy again within 20 minutes.

After 20 minutes, the toy and the remote will power off automatically.