



VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.

CHARGING INSTRUCTIONS

This vibrator arrives with partial charge of about half capacity, so it is advised to fully charge it before first use. Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about 2 hours and subsequent charges will take about 2.5 - 3 hours to complete.

The indicator light will flash while device is charging and turn off when toy is fully charged.

There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 80 minutes of play time on the lowest level of vibration, and about 60 minutes on the highest level.

This toy operates at a sound level of about 48 dB with a lithium battery at a DC voltage of 3.7V.

INSTRUCTIONS FOR USE

This toy has an easy to use 3-button control panel at the front of its base that controls both motors and the heating function. The main shaft and clitoral stimulator motors operate together. The heating function has its own control button.

Turn the toy on using the middle Power Button by pressing it for at least 2 seconds. The LED light will illuminate, and vibration will begin at its lowest speed.

Once the toy is turned on and vibrating, use the top Function Button to cycle through 10 speeds and functions in the main shaft and clitoral stimulator motors. These motors operate together.

Engage the warming function using the bottom Warming Button by pressing it for at least 2 seconds. The red LED light in the Warming Button illuminates while the warming function is engaged.

To turn the toy off, press the middle Power Button for at least 2 seconds. The motors will stop, and the LED lights will turn off.

