

Product Specifications:

Material: Silicon + ABS Battery: Lithium 751525,240mah Voltage: 3.7V

Number of Vibrations: 10 User time: 45 minutes Sound Level: <60 dbs

CHARGING INSTRUCTIONS

This vibrator arrives with a low partial charge, so it is recommended to

charge it fully before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input, located at the side of

the toy.
Initial charge will take about two hours and subsequent charges will take about 90 minutes to complete.

The indicator light will flash on toy while device is charging and become solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of

Charge lasts for about 60 minutes of play time on the lowest level of vibration, and about 45 minutes on the highest level.

This toy operates at a sound level of less than 60db with a 240mAh lithium

battery at a voltage of 3.7V.

The remote control is operated by a CR2032 button battery, already installed. INSTRUCTIONS FOR USE This toy can be operated directly with the button at its side, or with the two buttons on its remote control. Important note: You cannot turn the toy ON with the remote control. You must use the button directly on the toy

· INSERT

CHARGER HERE

USB RECHARGEABLE 🚟

automatically within 2 minutes.

to power it on. You

can use the remote to turn the toy OFF by putting it in standby mode, after which it will turn off