

Product Specifications:

Material: Silicone+ABS Battery: Lithium battery Voltage: 3.7V

Number of Vibrations: 10

speeds

User time: 1.5-2h

Sound Level: Less than 50 db

CHARGING INSTRUCTIONS

This toy arrives with a partial charge of about 70%. It is recommended to use up this energy completely before charging the first time.

To charge, connect the USB plug into the USB port of your computer or other output and the DC charger into the port at the base of the toy.

Initial and subsequent charges will take about 1

Initial and subsequent charges will take about 1 hour to complete.
The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.
Charge lasts for about 1.5 hour of play time at the highest level of vibration and about 2 hours at the lowest level

lowest level.

This toy operates at a sound level of less than 50db with a rechargeable lithium battery at 3.7V.

INSTRUCTIONS FOR USE

This toy has a convenient 1-button control at its base.

To turn toy on, press the button for at least 3 seconds. The light will turn on and toy will begin vibrating at its first lowest frequency. Once the toy is on, press the button again, a single time for each new speed or function for a total of

INSERT CHARGER HERE

To turn toy off, press button for at least 3 seconds.

USB RECHARGEABLE