

Product Specifications:

Material: Silicone + **ABS Plastic** Battery: 602040 400mAH Voltage: 3.7V Number of Vibrations: 8 User time: 60 minutes Sound Level: 55dB

CHARGING INSTRUCTIONS

This vibrator arrives with a partial charge of about 30%-50%, so it is recommended to fully charge before use.

Connect the USB end of the charging cable into the port of your power

Connect the USB end of the charging cable into the port of your power source and the other end onto the magnetic charging pins located below the control panel at the base of the toy's handle.

Initial charge will take about 1 hour, and subsequent charges will take about 1.5 hours to complete.

The indicator light will flash while device is charging and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 90 minutes of play time on the lowest level of vibration, and about 60 minutes on the highest level.

This toy operates at a sound level of less than This toy operates at a sound level of less than 55db with a rechargeable 400mAh lithium battery at 3.7V.

INSTRUCTIONS FOR USE

This toy has a convenient 2-button control at its base.

To turn motor on, press the bottom Power Button for at least 2 seconds. The indicator light will turn on and vibration will begin at and vibration will begin at its lowest frequency. Once the toy is on, use the top Function Button to cycle through 8 vibration speeds and functions. The indicator light will flash once for every new speed or function. To turn motor off, press the top Power Button for at least 2 seconds.

ATTACH USB CHARGER TO PRONGS USB RECHARGEABLE