

## **Product Specifications:**

Material: Silicone, ABS Plastic Battery: 602040 450mAH Voltage: 3.7V Number of Vibrations: 7F stretch function & 7F wave function User time: 60minutes

## CHARGING INSTRUCTIONS

This vibrator arrives with a partial charge, so it is recommended to charge

fully before use.
Connect the USB end of the charging cable into the port of your power source and the other end onto the magnetic charging pins located below the control

panel on the wing-shaped shaft. Initial charge will take about 1 hour, and subsequent charges will take about 2 hours to complete.

2 hours to complete.
The indicator light will flash while device is charging and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.
Charge lasts for about 90 minutes of play time on the lowest level of vibration, and about 60 minutes on the playet level about 60 minutes on the highest level. This toy operates at a sound level of less than 55db with a rechargeable 450mAh lithium battery at 3.7V.

## INSTRUCTIONS FOR USE

This toy has a convenient 2-button control at the back of its wing-shaped shaft.

Press the top button for 3 seconds to engage the tapping motor in the wing-shaped shaft. The button and tapping point will light up and tapping will begin at its lowest frequency. Press the button again more quickly to cycle through 7 tapping speeds and functions. To turn off, press again for 3 seconds. The lights will turn off and

tapping will cease.

Press the bottom button for 3 seconds to engage the main shaft motor. The button will light up, and vibration and thrusting will begin at their lowest

frequency. Press the button again more quickly to cycle through 7 speeds and functions. To turn off, press again for 3 seconds. The light will turn off and thrusting and vibration will cease.

ATTACH USB Charger

VED

**USB RECHARGEABLE** 

TO PRONGS