



VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.



CHARGING INSTRUCTIONS

This vibrator arrives with a very low partial charge, so it is recommended to fully charge it before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input at the side of the base.

Charging takes about an hour each time, with the initial charge taking slightly longer.

The indicator light will flash while device is charging and turn solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 70 minutes of play time on the lowest level of vibration, and about 50 minutes on the highest level.

This toy operates at a sound level of 55db with a lithium battery at a voltage of 3.7V.

INSTRUCTIONS FOR USE

This toy operates with a 3-button control panel at the base of the toy's handle. The center button turns the toy on and off, and the plus and minus buttons increase and decrease the speeds and functions respectively.

Press the center button for at least 3 seconds to turn toy on. The LED will illuminate and vibration in both motors will begin at their lowest speeds.

Use the plus button at the top to increase speed and intensity and use the minus button to decrease speed and intensity – for a total of 10 functions.

To turn off vibration in both motors, press the button again for at least 3 seconds.



USB RECHARGEABLE