

Product Specifications:

Material: ABS plastic, TPE rubber Battery: Polymer cell, 600mAh

Voltage: 3.7V

Number of Vibrations: 7 vacuum and evacuation

User time: 40 mins on high

Sound Level: Less than 60db

CHARGING INSTRUCTIONS

CHAGGING INSTRUCTIONS

This vibrator arrives with a partial charge, so it recommended to charge it fully before first use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into the toy's coale port located at the toy's base.

The battery will charge fully in about two and a half hours.

The indicator light will flosh while device is charging and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time. Charge lasts for about 90 minutes of play time with the lowest level of vibration, and 40 minutes with the highest level of vibration.

This toy operates at a sound level of less than 60db and a voltage of 3.7V with a 600mAh lithium battery.

INSTRUCTIONS FOR USE

WICHONS FOR USE

This toy has a five-button control panel on its handle, 1-5 starting from the top.

To turn the toy on, press the Power Button (Justion 1) for at least three (3) seconds. The buttons will light up, and vibration will begin at its lowest speed.

Once the toy is powered up, change the wibration speed by pressing the Vibration Button (Justion 1). To activate the sucking function motor, press the Sucking Button (button 3) once. Press it again to cycle through seven (7). Sucking Button (button 3) once. Press it again to cycle through seven (7) sucking modes, including off. To activate the evacuation function which releases vacuum pressure immediately, press the Evacuation Button (button 4) for as long as desired to release air continuously. The evacuation function only works while the vacuum function is engaged.

The Max Power button (button 5) gives a boost of maximum vacuum power and evacuation simultaneously. Press the button to engage the max power, then press again to disengage.

To turn the toy off, press the Power Button (button 1) for at least three (3) seconds. The LED light will go dark, and all vibrations and functions will stop. CLEANING INSTRUCTIONS

There are two ways to dean the Squeeze Play:
WITH THE EVACUATION TUBE:

1. Place the included clear plastic Evacuation Tube into the evacuation hole at the back of the toy's handle (apposite side from the control panel)

2. Then press the buttons on the control panel in the following sequence: Power button (vibration button will also light up). Sucking Button (Evacuation Button will also light up). Then turn OFF the Vibration Button, leaving just the 1st, 3rd and 4th buttons lit.

3. Place the toy stroker end down into a sink or basin of dean water, control panel down – this allows water to cycle through the the water cycle for about two minutes to make sure the chamber is clean.

INSERT

NISERI
CHARGER
BY OPENING CHAMBER:
HERE
1. Twist and pop the handle off the stroker in one motion.
2. Press your thumb into the bottom of the stroker to pull the chamber apart.
3. Clean the chamber with soap and water, rinsing the chamber water water

