

**Product Specifications:** 

Material: Silicone & ABS plastic

Battery: Lithium Battery

Voltage: 3.7V

Number of Vibrations: 10 User time: 65 Minutes Sound Level: <55dps

## **CHARGING INSTRUCTIONS**

CHARGING INSTRUCTIONS
This toy arrives with a partial charge, so it is recommended to charge fully before first use.
To charge, connect the USB plug into a power source, and the DC charger into the port at the side of the cone's base.
Initial charge will take about 20 minutes and subsequent charges will take about 50 minutes to complete.
The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging but it's recommended not to overcharge for long periods of time.

Charge lasts for about 50 minutes of play time at the highest level of vibration, and about 65 minutes at the lowest level.

minutes at the lowest level.
This toy operates at a sound level of less than
55db with a rechargeable lithium battery at

## INSTRUCTIONS FOR USE

This toy has a convenient 1-button control at the side of its base.

To turn toy on, press the button for at least 2 seconds. The LED light will turn on and toy will begin vibrating at its first lowest frequency. Press the button again, a single time for each new speed or function for a total of 10.

To turn toy off, press button for at least 2 seconds.

**USB RECHARGEABLE** 

INSERT / CHARGER HERE