

PLAYBOY

Pleasure

Product Specifications:

Material: Silicone & ABS Plastic
Battery: 2000mAh
Voltage: 5V
Number of Vibrations: 10 with 3 power levels
User time: 180 – 240 minutes
Sound Level: Less than 50 dB



CHARGING INSTRUCTIONS

This toy arrives with a partial charge so it is recommended to charge fully before first use.

To charge, connect the USB plug into a USB power source at one end, and the DC charger plug into the port at the bottom of the toy's base.

Initial charge will take about 2 hours. Subsequent charges will take about 4 hours to complete.

The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging but it's recommended not to overcharge for long periods of time.

Charge lasts for about 3 hours of play time on the highest level of vibration and about 4 hours at the lowest level.

This toy operates at a sound level of less than 50db with a rechargeable 2000mAh lithium battery at 5V.

INSTRUCTIONS FOR USE

This toy has a 2-button control at the side of its handle. To turn toy on, press the bottom button for at least 2 seconds. The light will turn on and toy will begin vibrating at its highest frequency.

Press the top button to cycle through 10 rhythms of vibration. In any given rhythm, press the bottom button again to cycle through 3 levels of intensity. Each different vibration pattern has 3 intensities. To turn toy off, press bottom button for at least 2 seconds.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure – Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries. Avoid use with silicone or oil-based lubricants as it will degrade the material overtime.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use. Avoid prolonged exposure to sunlight and extreme heat.
3. Clean your vibrator after every use with Playboy Pleasure – Clean: Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

CONTAINS BATTERY
AND MUST BE RECYCLED

