

PLAYBOY

Pleasure

Product Specifications:

Material: Silicone & ABS Plastic
Battery: Li-ion battery, 3.7V/650mAh
Voltage: 5V
Number of Vibrations: 9 vibrating, 9 flicking
User time: 60-80 minutes
Sound Level: <55db



USB
RECHARGEABLE

CHARGING INSTRUCTIONS

This vibrator arrives with partial charge, so it is recommended to charge fully before first use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger onto the toy's magnetic charging pins, located at the center back of the main shaft.

Initial and subsequent charges will take about 130 minutes to complete.

The indicator light will flash while device is charging and turn solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 80 minutes of play time on the lowest level of vibration, and about 60 minutes on the highest level.

This toy operates at a sound level of about 55db with 650 mAh lithium battery at a voltage of 3.7 - 5V.

INSTRUCTIONS FOR USE

This dual vibrator is operated with an easy-to-use 2-button panel located on the front center of the main shaft. Each button controls a separate motor with its own on/off function.

The top button controls the 'licking' function at the tongue end. Press for at least three seconds to engage the licking motor. The blue LED light will go on and the motor will begin in standby. Click again more quickly to cycle through a total of 9 speeds and functions, as well as standby. Press again for at least three seconds to turn off the licking function motor.

The bottom button controls the vibration motor in the main shaft. Press for at least three seconds to engage the motor. The blue LED light will go on and the motor will begin in standby. Click again more quickly to cycle through a total of 9 vibration speeds and functions as well as standby. Press again for at least three seconds to turn off vibration motor.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure - Silk; H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries. Avoid use with silicone or oil-based lubricants as it will degrade the material overtime.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use. Avoid prolonged exposure to sunlight and extreme heat.
3. Clean your vibrator after every use with Playboy Pleasure - Clean; Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

CONTAINS BATTERY
AND MUST BE RECYCLED



Li-ion