

PLAYBOY

Pleasure

Product Specifications:

Material: Silicone + ABS
Battery: 801620 / 180 mAh
Voltage: 3.7V
Number of Vibrations: 7 Modes
User time: about 40 minutes
Sound Level: ≤60db



USB
RECHARGEABLE

CHARGING INSTRUCTIONS

This vibrator arrives with a partial charge. It is recommended to charge fully before use. Connect the USB plug into your USB power source and the other end of the DC charger into toy's input at side of base.

Initial and subsequent charges take about 60 minutes to complete.

The light will flash while device is charging and turn off when toy is fully charged. There is no danger of battery damage by overcharging.

Charge lasts for about 40 minutes of play time on the highest vibration level, and about 80 minutes on the lowest vibration level.

Toy vibration slows for several minutes before stopping completely.

This toy operates at a sound level of 60db at 3.7V with a 180mAh battery.

INSTRUCTIONS FOR USE

Press the button at the side of the toy's handle for about 2 seconds to turn on. The button will light up and toy will begin vibrating at its lowest frequency.

Press the button again more quickly to cycle through 7 motor modes. The light will flash once every time you switch to a new speed or function.

Press the button for about 2 seconds to turn the toy off. The light will turn off and the vibration will cease.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure - Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries. Avoid use with silicone or oil-based lubricants as it will degrade the material overtime.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use. Avoid prolonged exposure to sunlight and extreme heat.
3. Clean your vibrator after every use with Playboy Pleasure - Clean: Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

CONTAINS BATTERY
AND MUST BE RECYCLED



Li-ion