

PLAYBOY

Pleasure

Product Specifications:

Material: Food Grade Silicone & ABS Plastic
Battery: YL801620 180mah
Voltage: 3.7V
Number of Vibrations: 10
User time: 45 - 60 Minutes
Sound Level: ≤60DB



CHARGING INSTRUCTIONS

This vibrator arrives partially charged. It is recommended to fully charge before use.

Connect the USB plug into a USB power source and the other end of the DC charger into toy's input at the end of the removable bullet.

Initial charge will take about 1 hour, and subsequent charges will take about 2 hours to complete.

The LED light will flash while bullet is charging and turn off when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 1 hour of play time on the lowest vibration level, and about 45 minutes of play time on the highest level.

Toy vibration slows before stopping completely when charge is fully depleted.

This toy operates at a sound level of 60db and a power level of 3.7 with a 180mAh battery.

INSTRUCTIONS FOR USE

Press the button at base of bullet for 3 seconds. The LED light will turn on and bullet will begin vibrating at its lowest speed. Press the button again more quickly to cycle through 10 speeds and rhythms. Press the button for 3 seconds to turn the toy off. The light will turn off and the vibration will quit.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure - Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries. Avoid use with silicone or oil-based lubricants as it will degrade the material over time.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use. Avoid prolonged exposure to sunlight and extreme heat.
3. Clean your vibrator after every use with Playboy Pleasure - Clean; Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

