

<http://www.genderx.com/>

GENDER X



Product Specifications:

Material: Silicone & ABS

Battery: 650mAh

Voltage: 5V

Number of Functions: 10

vibrating, 5 tapping

User time: 45 - 90 Minutes

Sound Level: <50 DB

CHARGING INSTRUCTIONS

This vibrator arrives with a low partial charge, so it is recommended to charge fully before first use. Connect the USB plug into a USB power source, and the other end of the charger onto the toy's magnetic charging pins, located behind the main shaft at the end of the handle base.

Initial charge will take about 1 hour and subsequent charges will take about 2.5 hours to complete. The indicator light will flash while device is charging and turn solid when toy is fully charged. There is no danger of battery damage by overcharging but it's recommended not to overcharge for long periods of time.

Charge lasts for about 1.5 hours of play time on the lowest level of vibration, and about 50 minutes on the highest level.

This toy operates at a sound level of about 50db with a 650mAh lithium battery at 5V.

INSTRUCTIONS FOR USE

This vibrator operates with a 3-button panel located at the bottom of the base. Each button controls a separate motor with its own on/off function. Any button can start the toy and put it in standby, but after that each motor must be turned off individually.

Press any button for at least two seconds to turn on the toy. The button will light up and all 3 motors will be in standby. The bottom button controls the vibration in the main shaft head, the middle button controls the tapping in the main shaft, and the top button controls the pulsating ball in the base shaft.

Once the toy is in standby, press the bottom button quickly to engage the vibration motor in the main shaft. Press again to cycle through 10 speeds and rhythms. Press again for at least 2 seconds to turn this motor off.

Once the toy is in standby, press the middle button quickly to engage the tapping function in the main shaft. Press again to cycle through 5 tapping speeds and rhythms. Press again for at least 2 seconds to turn this motor off.

Once the toy is in standby, press the top button quickly to engage the pulsating ball in the base shaft. Press again to cycle through 5 pulsating speeds and rhythms. Press again for at least 2 seconds to turn this motor off.

ATTACH USB CHARGER TO PRONGS

