

## **Product Specifications:**

Category: Vibrator User: Women Material: ABS+Silicone Size: H: 175mm W: 36mm D: 36mm Battery: 240mAh Voltage: 3.7V Number of Vibrations: 10 speeds User time: 50 minutes Sound Level: <55db

CHARGING INSTRUCTIONS
This vibrator arrives with a minimal partial charge, so it is recommended to fully charge before use.

Connect the USB plug into the USB port of your computer or other output and the other end of

the DC charger into toy's input. Initial charge will take about 20 minutes, and subsequent charges will take about an hour to

subsequent charges will take about an hour to complete.
The indicator light will flash slowly while device is charging, and flash quickly when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.
Charge lasts for about 90 of play time on the lowest level of vibration, and about 50 minutes on the highest level.
Toy vibration slowly decreases when charge

Toy vibration slowly decreases when charge begins to deplete.

This toy operates at a sound level of 55db with a 3.7V 240mAh battery

## INSTRUCTIONS FOR USE

This toy has a convenient one-button control at its base.

To turn toy on, press the button for at least 3 seconds. The light will turn on and toy will begin vibrating at its first lowest frequency. Once the toy is on, press the button a single time for each new

speed or function for a total of 10. To turn toy off, press power button for at least 3 seconds.

## **USB RECHARGEABLE**

