

Product Specifications:

Battery: Lithium battery Voltage: 3.7V Number of Vibrations: 12 models User time: 90 minutes Sound Level: Less than 75DB

CHARGING INSTRUCTIONS

This vibrator arrives with a minimal partial charge, so it is

recommended to fully charge before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Input.
Initial charge will take about 30 minutes, and subsequent charges will take about 90 minutes to complete.
The indicator light will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.
Charge lasts for about 2 hours of play time on the lowest level of vibration, and about 90 minutes on the highest level.

of vibration, and about 90 minutes on the highest level.
This toy operates at a sound level of less than 75db with a rechargeable lithium battery at 3.7V.

INSTRUCTIONS FOR USE

This toy has a convenient 2-button control at the side of its base.

To turn toy on, press the Power Button (lower button) for at least 2 seconds. The light will turn on and toy will begin vibrating at its first lowest frequency.

Once the toy is on, press the Function Button a single time for each new speed or function for a total of 12.

To turn toy off, press power button for at least 2 seconds.



