

**Product Specifications:** 

Material: ABS Plastic Battery: Lithium battery

Voltage: 3.7 V

Number of Vibrations: 9

User time: 60 minutes

Sound Level: < 50db

## CHARGING INSTRUCTIONS

This vibrator arrives with a partial charge of about half capacity and may be used immediately, directly out of the box.

of the USB plug into the USB port of your computer or other output and the double magnetic prong end of the DC charger into input at base of toy.

Initial charge will take about 2 hours, and subsequent charges will also take about 2 hours to

The indicator light will flash while device is charging and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 1 hour of play time on the lowest level of vibration, and about 40 minutes on the highest level.

This toy operates at a sound level of less than 52db with a rechargeable lithium battery at 3.7V.

## INSTRUCTIONS FOR USE

This toy has a convenient 1-button control at its base.

To turn toy on, press the Power Button for at least 2 seconds. The light will turn on and toy will begin vibrating at its first lowest frequency.

Once the toy is on, press the Power Button again, a single time for each new speed or function for a total of 10.

To turn toy off, press Power Button for at least 2 seconds.

**USB RECHARGEABLE** 



