



VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.



CHARGING INSTRUCTIONS

This vibrator arrives with a partial charge, so it is recommended to fully charge before use. Connect the USB plug into the USB port of your computer or other output, and the other

end of the DC charger into toy's input.

Initial charge will take about 2 hours, and subsequent charges also take about 2

hours to complete.

The indicator light will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 2 hours of play time on average.

Toy vibration stops completely when charge falls below a full charge.

This toy operates at a sound level of 50db and a power level of 3.7V.

INSTRUCTIONS FOR USE

To turn toy on, press the Power Button for at least three seconds. The toy will turn on at its lowest vibration setting.

Once toy is turned on, use the same button to cycle through 8 different vibration speeds and functions.

To turn toy off, press Power Button for at least 3 seconds.

USB RECHARGEABLE

