

Product Specifications:

Material: Silicone & ABS Battery: Lithium-lon battery Voltage: 4V

Number of Vibrations: 10 User time: 60 Minutes Sound Level: <45dB

CHARGING INSTRUCTIONS

This toy arrives with a high charge, so it is not necessary to charge before first use. Initial charge will take about 2 hours, subsequent charges about 90 minutes. Charge lasts for about 60 minutes of play time.

To charge, connect the USB plug into a power source and the DC charger into the port at the base of the toy's handle. The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

This toy operates at a sound level of less than

45db with a rechargeable lithium battery at a voltage of 4V.

INSTRUCTIONS FOR USE

This toy has a 1-button control at the front of its handle. To turn toy on, press the button for at least 2 seconds. The LED light will turn on and toy will begin in standby mode. Press the button once to begin vibrating at its first lowest frequency. Press the button again more quickly to cycle through 10 speeds and patterns. To turn toy off, press button for at least 2 seconds.



USB RECHARGEABLE