

<http://www.genderx.com/>

**GENDER X**



**Product Specifications:**

Material: Liquid Silicone  
Battery: Li-ion battery  
Battery Voltage: 3.7V  
Number of Vibrations: 10  
User time: 60 – 90 Minutes  
Sound Level: ≤60DB

**CHARGING INSTRUCTIONS**

This toy arrives with a partial charge. It is recommended to charge fully before first use.

To charge, connect the USB plug into a power source, and the DC charger into the port at the back of the toy's ball, under the control buttons.

Initial charge will take 4-6 hours and subsequent charges will take 2-3 hours to complete.

The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 60 minutes of play time at the highest level of vibration, and about 90 minutes at the lowest level.

This toy operates at a sound level of less than 60db with a rechargeable lithium battery at 3.7V.

**INSTRUCTIONS FOR USE**

This toy has a 2-button control panel at the side of its vibrating ball. Each button controls its own motor independently. The LED light above the buttons indicates when a motor is on.

To engage vibration in the head of the shaft, press the button furthest from the charging port for at least 2 seconds. The shaft will begin vibrating at its lowest frequency. Press button again to cycle through 10 speeds and patterns of vibration. Press the button for at least 2 seconds to turn off the vibration motor in the shaft.

To engage vibration in the ball, press the button closest to the charging port for at least 2 seconds. The ball will begin vibrating at its lowest frequency. Press button again to cycle through 10 speeds and patterns of vibration. Press the button for at least 2 seconds to turn off the vibration motor in the ball.

