

<http://www.genderx.com/>

GENDERX



Product Specifications:

Material: Silicone & ABS

Battery: 240mAh

Voltage: 5V

Number of Vibrations: 10

User time: 60 Minutes

Sound Level: ≤50dB

CHARGING INSTRUCTIONS

It is recommended to charge before first use. Initial charge will take about 30 minutes, subsequent charges about 1 hour. Charge lasts for 45 minutes of playtime at the highest speed and 90 minutes at the lowest speed. To charge, connect the USB plug into a power source and the DC charger onto the magnetic charging pins at the back of the vibrating shaft. The indicator light will flash while device is charging and stay constant when toy is fully charged.

This toy operates at a sound level of less than 50db with a rechargeable 240mAh lithium battery at a voltage of 5V.



INSTRUCTIONS FOR USE

1. Press the button at the tip of the vibrating shaft for 2 seconds to turn toy on. The button will light up and toy will begin vibrating at its first lowest frequency.
2. Press button again more quickly to cycle through 10 speeds and patterns.
3. To turn toy off, press button for at least 2 seconds.