

Product Specifications:

Material: Silicone, ABS Plastic & TPE Battery: Li-ion Voltage: 3.7V Number of Functions: 10 vibrating, 7 suction, 7 sucking & squeezing User time: 60 minutes Sound Level: <45 db

This vibrator arrives with partial charge, so it is recommended to charge fully before first use.

Connect the USB plug into a power source and the other end of the DC charger onto the toy's magnetic charging pins, located at the back of the handle base, opposite the control panel.

Initial charge should take about 90 minutes, and subsequent charges will take about 2 hours to

The indicator light will flash while device is charging and turn solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods

Charge lasts for about 90 minutes of play time on the lowest level of vibration, and about 60 minutes

This toy operates at a sound level of about 45db with lithium battery at a voltage of 3.7V.

INSTRUCTIONS FOR USE

This squeezing, sucking, talking, vibrating stroker is operated with a
4-button panel located on the side of the main canister. Each button controls a separate motor with its own on/off function.

Press the bottom power button for 2 seconds to turn the toy on. The LED light will go on and all the motors and functions will be in standby. Press the power button ATTACH USB CHARGER this button to turn the toy off by pressing again for 2 seconds.

Once the toy is turned on with the power button, press the suction button (2nd from bottom) for 2 seconds to engage the suction motor. The button will light up and suction will begin at its lowest speed. Press again more quickly to cycle through 3 speeds and 4 patterns (7 functions in total). Press again for 2 seconds to turn off the suction motor

Once the toy is turned on with the power button, press Unce me toy is turned on with the power dutinot, press
the squeezing button (3rd from bottom) for 2 seconds
to engage the squeezing motor. The button will light
up and squeezing will begin at its lowest speed. Press
again more quickly to cycle through 3 speeds and 4
patterns (7 functions in total). Press again for 2 seconds to turn off the squeezing motor.

Once the toy is turned on with the power button, press

the top voice button quickly to engage the audio function. The button will light up and voice will begin. Press for 2 seconds to turn off the voice function.

