

**Product Specifications:** 

Material: Silicone & ABS Battery: Polymer lithium Voltage: 3.7V Number of Vibrations: 10 User time: 50 - 75 minutes Sound Level: < 55dp



## **CHARGING INSTRUCTIONS**

It is recommended to charge this toy before first use. Initial charge toy before first use. Initial charge completes in about 1 hour, subsequent charges in 90 minutes. Connect the USB cable to a power source at one end and plug the other end into the port at the toy's mid-line silicone ring. An indicator light flashes while charging, then becomes solid when charge is complete. complete.

Battery charge lasts for about 75 minutes on the lowest frequency, and about 50 minutes on the highest frequency. Sound level reaches 55db and toy operates at

## INSTRUCTIONS FOR USE

1. Press the button at the side of the toy's silicone mid-line for 2 seconds to turn toy on. The button will light up and toy will begin vibrating at its lowest frequency.

2. Press button again for 0.5 seconds at a time to cycle through

10 speeds and patterns.
3. To turn toy off, press button for at least 2 seconds. Vibration will cease and light will turn off.