

**Product Specifications:** 

Material: Silicone & ABS Battery: Lithium battery

Voltage: 3.7V

 
Number of Vibrations: 5 User time: 50 - 70 Minutes Sound Level: ≤50dB

## CHARGING INSTRUCTIONS

This toy arrives with a high partial charge of between 70% so it is not necessary to charge before first use. If you do charge it first, initial charge will take about 50 minutes and subsequent charges will take 100 minutes to complete.

Influes to Complete.
To charge, connect the USB plug into a power source, and the DC charger into the port at the side of the toy's base.
Initial charge will take about 2 hours and subsequent charges will take

about 90 minutes to complete. The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by





This toy operates at a sound level of less than 50db with a rechargeable lithium battery at 3.7٧.

INSTRUCTIONS FOR USE This toy has a convenient 1-button control at the front of its handle. To turn toy on, press the button for at least 2 seconds. The LED light will turn on and toy will begin vibrating at its first lowest frequency. Press the button again, a single time for each new speed or function for a total of 5. To turn toy off, press button for at least 2 seconds.