

<http://www.genderx.com/>

**GENDER** X



**Product Specifications:**

Material: ABS & Silicone  
Battery: Polymer lithium  
Voltage: 5.0V  
Number of Vibrations: 10  
User time: 60 - 70 Minutes  
Sound Level: <55dp

**CHARGING INSTRUCTIONS**

This toy arrives with a 70% charge, so it's not necessary to charge before first use. But if you do, initial charge will take about 50 minutes.

Subsequent charges will take about 2 hours. Charge lasts for about 70 minutes at the lowest speed and about 60 minutes at the highest speed. To charge, connect the USB plug into a power source and the DC charger into the charging port at the back of the tall shaft's base. The indicator light will

flash while device is charging and stay constant when toy is fully charged.

This toy operates at a sound level of less than 55db with a rechargeable lithium battery.



**INSTRUCTIONS FOR USE**

1. Each end of the toy has its own button with a corresponding arrow that points in its direction. Press the arrow button that points to the shaft for 3 seconds to turn on the motor in the shaft. The light will turn on and the motor will begin at its lowest frequency. Press the same button again more quickly to cycle through 10 speeds and patterns.
2. Press the arrow button that points to the wearable end for 3 seconds to turn on the motor in the wearable end. The light will turn on and the motor will begin at its lowest frequency. Press the same button again more quickly to cycle through 10 speeds and patterns.
3. Press each arrow button again on the toy directly for 3 seconds to turn the respective motors off. The light will go out and all vibration will cease.