

# PLAYBOY

## *Pleasure*

### Product Specifications:

Material: silicone & ABS  
Battery: 400mah  
Voltage: 3.7V  
Number of Vibrations: 10  
User time: 50 Minutes  
Sound Level: <60db



ATTACH USB  
CHARGER  
TO PRONGS

USB  
RECHARGEABLE

### CHARGING INSTRUCTIONS

This toy arrives with a partial charge, so it is recommended to charge fully before first use. Charges will take about 2 hours to complete.

To charge, connect the USB plug into a power source at one end, and the DC charger onto the magnetic charging pins at the back of the toy, near the control panel buttons.

The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging but it's recommended not to overcharge for long periods of time.

Charge lasts for about 50 minutes of play time with average use.

This toy operates at a sound level of less than 60db with a rechargeable 400mAh lithium battery at 3.7V.

### INSTRUCTIONS FOR USE

This toy has a 2-button control at the back of its circular shape. The power button turns on and controls the vibration motor. The tapping button turns on and controls the tapping motor.

To turn on vibration in the toy, press the power button for at least 2 seconds. The light will turn on and the toy will be in standby mode. Press button once and vibration will begin at its lowest frequency. Press again more quickly to cycle through 10 speeds and rhythms of vibration. Double-click the button to turn off the vibration motor.

To turn on the toy's tapping function, press the tapping button once. The light will turn on and tapping will begin at its lowest frequency. Press again more quickly to cycle through 10 speeds and rhythms of tapping. Hold down the button for 2 seconds to turn off the tapping function.

### VIBRATOR CARE INSTRUCTIONS

1. Compatible with silicone and water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use.
3. Clean your vibrator after every use with mild soap or toy cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

CONTAINS BATTERY  
AND MUST BE RECYCLED



Li-ion