

Product Specifications:

Material: Silicone & ABS Battery: Lithium battery Voltage: 3.7V Number of Vibrations: 10 User time: 50 - 70 Minutes Sound Level: <45db

CHARGING INSTRUCTIONS

ATTACH USB CHARGER TO PRONGS

It is recommended to charge this toy before first use. Charging will complete in about 2 hours. Connect the USB cable to a power source at one end and connect the other

end to the magnetic charging pins at the base of the toy. An indicator light means the toy is charging. Battery charge lasts for about 70 minutes on the lowest frequency, and about 50 minutes on the highest frequency. This toy operates at a sound level of about 45db at 3.7V.

INSTRUCTIONS FOR USE

1. Press the button at the toy's base for 2 seconds to turn the toy

on. The button will light up and toy will begin vibrating at its first lowest frequency.

2. Press button again to cycle through 3 speeds & 7 patterns.

3. To turn toy off, press button for at least 2 seconds. Vibration will stop and light will turn off.

USB RECHARGEABLE