

Product Specifications:

Material: Silicone & ABS Battery: Lithium battery Voltage: 3.7V Number of Vibrations: 10 User time: 50 - 70 Minutes Sound Level: <45db

CHARGING INSTRUCTIONS

It is recommended to charge before first use. Initial charge

will take about 2 hours, subsequent charges about 90 minutes. Charge lasts for 50 minutes of playtime at the highest speed and 70 minutes at the lowest speed.

To charge, connect the USB plug into a power source and the DC charger onto the magnetic charging pins at the bottom of the toy's base. The indicator light will flash while device is charging and stay constant when toy is fully charged.

This toy operates at a sound level of less than 45db with a rechargeable lithium battery at a voltage of 3.7V.



1. Press the button at the toy's base for 2 seconds to turn the toy on. The button will light up and toy will begin vibrating at its first lowest frequency.
2. Press button again to cycle

through 3 speeds & 7 patterns. 3. To turn toy off, press button for at least 2 seconds. Vibration will stop and light will turn off.

USB RECHARGEABLE

