

PLAYBOY

Pleasure

Product Specifications:

Material: Silicone
Battery: Lithium Battery
Voltage: 3.7V
Number of Vibrations: 7
User time: 60 Minutes
Sound Level: <60db



CHARGING INSTRUCTIONS

This toy arrives with a partial charge of about 30%. It is recommended to use up this energy before recharging for the first time. Repeat this charging cycle 3 times to maximize battery life.

To charge, connect the USB plug into a power source at one end, and the DC charger plug into the port at the back of the toy's base. Initial and subsequent charges will take about 1 hour to complete. The indicator light will flash while device is charging and stay constant when toy is fully charged.

Charge lasts for about 1 hours of play time on the highest level of vibration. This toy operates at a sound level of less than 60db with a rechargeable 220mAh lithium battery at 3.7V.

INSTRUCTIONS FOR USE

1. The control panel is located at the base of the toy's handle.
2. Press the button for 2 seconds to turn toy on. The button will light up and both motors will begin vibrating at their lowest speed.
3. Press the button again more quickly to cycle through 7 vibrating speeds and rhythms in both shafts.
4. To turn the toy off, press the button for 2 seconds. The light will turn off and both motors will cease.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure - Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use.
3. Clean your vibrator after every use with Playboy Pleasure - Clean: Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

