

PLAYBOY

Pleasure

Product Specifications:

Material: Liquid Silicone
Battery: Li-Polymer battery, 320mAh
Voltage: 3.7V
Number of Vibrations: 10
User time: 60 to 90 minutes
Sound Level: <50DB



CHARGING INSTRUCTIONS

It is recommended to charge this toy fully before first use. To charge, connect the USB plug into a power source at one end, and the DC charger plug into the port located at the midline of the toy, at the side of the bottom bead. Initial charge will take about 90 minutes; subsequent charges will take about 2 hours to complete. The indicator light will flash while device is charging and stay constant when toy is fully charged.

Charge lasts for about 1 hour of play time on the highest level of vibration and 90 minutes on the lowest. This toy operates at a sound level of less than 50db with a rechargeable 320mAh lithium battery at 3.7V.

INSTRUCTIONS FOR USE

1. The control panel is located at the midline of the toy.
2. This toy has two motors that are controlled separately.
3. Press the power button for 2 seconds to turn toy on. The button will light up and both motors will begin in standby.
4. Press the power button again more quickly to engage vibration in the single-tip head. Press again to cycle through 10 vibrating speeds and rhythms, and back to standby.
5. Once the toy is in standby, press the vibration button to engage the motor in the beaded shaft. Press again to cycle through 10 vibrating speeds and rhythms, and back to standby.
6. To turn the toy off, press the button for 2 seconds. The light will turn off and both motors will cease.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure – Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use.
3. Clean your vibrator after every use with Playboy Pleasure – Clean: Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

