

PLAYBOY

Pleasure

Product Specifications:

Material: Silicone & ABS
Battery: LiCoMnNiO₂
voltage: 3.7-5 V
Number of Vibrations: 7 vibrating, 3 thrusting
User time: 60 – 70 Minutes
Sound Level: ≤60dB

ATTACH USB
CHARGER
TO PRONGS



CHARGING INSTRUCTIONS

It is recommended to charge this toy for 30 minutes before first use. After initial charge and full depletion, charges will take about 200 minutes to complete. To charge, connect the USB plug into a power source at one end, and the magnetic DC charger onto the magnetic charging pins at the back of the handle's base.

The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging but it's recommended not to overcharge for long periods of time. Charge lasts for about 90 minutes of play time at the highest level and about 110 minutes at the lowest level.

This toy operates at a sound level of less than 60db with a rechargeable lithium battery at 3.7V – 5V.

INSTRUCTIONS FOR USE

1. The control panel is located at the front of the toy's handle, beneath the bunny shaft. The light for each button will turn on when it is engaged.
2. Press the bottom power button for about 3 seconds to turn toy on. All motors will begin in standby.
3. Press the left button to engage spinning and thrusting in the main shaft. The motor will begin at its lowest speed. Press again to cycle through 3 speeds.
4. Press the right button to engage vibration in the bunny shaft and anal beads simultaneously. The motors will begin at their lowest speeds. Press again more quickly to cycle through 7 speeds and rhythms.
5. Press the top "turbo" button to immediately engage all motors at their maximum speeds and intensities in an instant burst of power. Press again to return to your previous settings.
6. To turn the toy off, press the bottom power button for 3 seconds. The light will turn off and both motors will cease.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure – Slick: H₂O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use.
3. Clean your vibrator after every use with Playboy Pleasure – Clean: Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

