

<http://www.genderx.com/>

GENDER X



Product Specifications:

Material: Silicone & ABS
Battery: Lithium battery
Voltage: 3.7V
Number of Vibrations: 10
User time: 40 - 45 Minutes
Sound Level: ≤50dB

CHARGING INSTRUCTIONS

It is recommended to charge this toy fully before first use. To charge, plug the USB cable into a power source and the DC end into the port at the tip of the toy's base. Initial and subsequent charges will take about 70 minutes to complete. The indicator light will flash while device is charging and stay constant when toy is fully charged. Charge lasts for 40 minutes of playtime at the highest speed and 45 minutes at the lowest speed. This toy operates at a sound level of less than 50db with a rechargeable battery at a voltage of 3.7V.

INSTRUCTIONS FOR USE

1. This toy has a 1-button panel on the bottom of the base of the toy, and a remote control with 3 buttons. The 2 motors operate together.
2. Press the button on the toy for 3 seconds to turn the toy on. The light will turn on and both motors will begin in standby. Press again more quickly to cycle through 10 speeds and patterns of vibration. Press again for 3 seconds to turn the motors off. The light will turn off and vibration will cease.
3. Turn on the remote control (once the toy is in standby) by pressing the center power button for at least 2 seconds. The light will turn on and the remote will begin in standby. Press the plus or minus buttons to cycle through 10 vibration speeds and patterns in both motors simultaneously. Press again for 2 seconds to turn off the remote. The light will turn off and vibration will return to standby.
4. Use the toy's button to turn off the toy completely.

