

<http://www.genderx.com/>

GENDER X



Product Specifications:

Material: Silicone & ABS

Battery: Polymer lithium

Voltage: 3.7V

Number of Vibrations: 10

User time: 50 – 70 Minutes

Sound Level: < 55dp

CHARGING INSTRUCTIONS

It is recommended to charge this toy fully before first use. To charge, plug the USB cable into a power source and the DC end onto the magnetic charging pins at the back of the toy's base. Initial charge will take about 30 minutes; subsequent charges about 60 minutes to complete. The indicator light will flash while device is charging and stay constant when toy is fully charged.

Charge lasts for 50 minutes of playtime at the highest speed and 70 minutes at the lowest speed. This toy operates at a sound level of less than 55db with a rechargeable battery at a voltage of 3.7V.

INSTRUCTIONS FOR USE

1. This toy has a 1-button panel at the back of the toy's base, and a 1-button remote control. The 2 motors operate together – one in the plug, one in the base.

2. Press the toy's button for 2 seconds to turn the toy on. The light will turn on and both motors will begin in standby. Press again more quickly to cycle through 10 speeds and patterns of vibration. Press again for 2 seconds to turn the motors off. The light will turn off and vibration will cease.

3. Turn on the remote control (once the toy is in standby) by pressing its button for at least 2 seconds. The light will turn on and the remote will begin in standby. Press the button again to cycle through 10 vibration speeds and patterns in both motors simultaneously. Press for 2 seconds to turn off the remote. The light will turn off and vibration will return to standby.

4. Use the toy's button to turn off the toy completely.

