

# PLAYBOY

## *Pleasure*

### Product Specifications:

Material: Silicone & ABS  
Battery: LiCoMnNiO<sub>2</sub>  
Voltage: 3.7 - 4.2 V  
Number of Vibrations: 10 Vibrating, 3 Sucking  
User time: 60 - 80 Minutes  
Sound Level: ≤60dB



### CHARGING INSTRUCTIONS

Please charge toy for 30 minutes before first use. To charge, connect the USB plug into a power source at one end, and the DC charger onto the magnetic charging pins located on the toy's handle, above the suction function. Charge from empty in about 2 hours.

Charge lasts for about 80 minutes of play time at the lowest level and 60 minutes at the highest level. This toy operates at a sound level of less than 60db with a rechargeable lithium battery at 3.7 - 4.2V.

### INSTRUCTIONS FOR USE

1. The 3-button control panel is located at the base of the toy's handle.
2. Press the middle button for 3 seconds to turn on the vibration in the beaded shaft. The button will light up and motor will begin at its slowest speed. Press again more quickly to cycle through 10 vibration speeds and rhythms. Press for 3 seconds to turn off.
3. Press the top button to engage Turbo Mode. The button will light up and the beaded shaft motor will instantly go to its highest level of vibration. Press again to go back to the most recent speed. Press for 3 seconds to turn Turbo Mode off.
4. Press the bottom button for 3 seconds to turn on suction in the handle. The button will light up and suction will begin at its slowest speed. Press again more quickly to cycle through 3 speeds of suction. Press for 3 seconds to turn off.

USB  
RECHARGEABLE

### VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure - Slick: H<sub>2</sub>O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use.
3. Clean your vibrator after every use with Playboy Pleasure - Clean: Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

