

<http://www.genderx.com/>

GENDER X



Product Specifications:

Material: Silicone & ABS
Battery: Li-ion Battery
Voltage: 3.7 - 4.2V
Number of Vibrations: 10
vibrating, 3 rotating
User time: 60 - 70 Minutes
Sound Level: ≤50db

CHARGING INSTRUCTIONS

It is recommended to charge toys before first use. To charge, connect the USB plug into a power source and the DC charger onto the magnetic charging pins at the side of the ring or the base of the plug. The indicator light will flash while device is charging and stay constant when toy is fully charged. Charging time is between 90-130 minutes for the ring, and between 90-120 minutes for the plug. Charge will last about 70 minutes for the ring and about 60 minutes for the plug. These toys operate at a sound level of less than 50db with a rechargeable lithium battery at a voltage of 3.3V - 4.2V.

INSTRUCTIONS FOR USE

1. Operate these toys with their buttons directly or use the remote control once the motors are in standby. NOTE: Use toys' buttons directly to turn toys on and off. The remote can operate the motors once they are in standby mode, and it can put toy back into standby mode, but it can't turn toy on or off completely.
2. The vibrating plug has two buttons at its base - the power button that controls vibration and the bead button.
3. Hold down the power button for 3 seconds to turn both plug motors on. The light will turn on and both motors will begin in standby mode. Press the power button again more quickly to cycle through 10 speeds and patterns of vibration.
4. Hold down the power button for 3 seconds to turn on the C-Ring. The light will turn on and the toy will begin in standby mode. Press the power button again more quickly to cycle through 10 speeds and patterns of vibration.
5. Once the plug is turned on in standby, press the bead button to engage the rotating beads in the stem of the plug. Press again to cycle through 3 speeds of bead rotation. Double-click the button to reverse the beads. Press and hold the bead button for 1.5 seconds to turn off the bead function.



6. There is no separate power button on the remote. Each button operates its own motor from up to a 30' distance.
7. Once the toy is in standby (by turning on toys directly with their buttons), press the bottom button on the remote to engage the rotating bead motor in the plug. Double-click the button to reverse the direction of bead rotation. Press for 1.5 seconds again to put rotation in standby.
8. Use the middle button on remote to engage the vibration in the plug. Press again to cycle through 10 speeds and patterns. Press for 1.5 seconds again to put vibration in standby.
9. Use the top button to engage vibration in the C-ring. Press again to cycle through 10 speeds and patterns. Press for 1.5 seconds again to put rotation in standby.
10. Press the power button on each toy directly for 1.5 seconds to turn the motors off completely. The lights will go out and motors will cease.

USB RECHARGEABLE