

Product Specifications:

Material: Silicone & ABS Battery: Lithium battery Voltage: 3.7V

Number of Vibrations: 10 User time: 40 - 50 Minutes Sound Level: ≤ 50dB

CHARGING INSTRUCTIONS

CHARGING INSTRUCTIONS

It is recommended to charge this toy before first use. To charge, connect the USB plug into a power source and the DC charger into the charging port at the bottom of the toy's base. The indicator light will flash while device is charging and stay constant when toy is fully charged.

Charges will take about 80 minutes to complete.

Charge losts for about 50 minutes of play time at the lowest speed, and 40 minutes at the fastest speed. This toy operates at a sound level of less than 50db with a rechargeable lithium battery at a voltage of 3.7V. The remote control is not rechargeable. It uses 1 x AAA battery, not included.

INSERT CHARGER HERE **USB RECHARGEABLE**

INSTRUCTIONS FOR USE

1. Press the button at the toy's base for 2 seconds to turn the toy on. The button will light up and toy will begin in standby.

2. Press button again for 0.5 seconds at a time to cycle through 3 sneeds & 7 notterns.

speeds & 7 patterns.

3. Once the toy is in standby, to use remote press the + button to begin the first function. Continue to press to cycle up thru functions. Press the

- button to cycle down thru functions. Press thru functions. Press
the power button to
return the toy to
standby.
4. To turn the toy off,
press the button for at
least 2 seconds.
Vibration will stop and
the light will turn off.
NOTE: The remote
cannot turn the toy on
or off by itself. Use the or off by itself. Use the toy's button to turn on initially and off completely.