

## **Product Specifications:**

Material: Silicone & ABS Battery: Lithium battery Voltage: 3.7V

Number of Vibrations: 10 User time: 40 - 50 Minutes Sound Level: ≤50dB

## CHARGING INSTRUCTIONS

It is recommended to charge this toy before first use. To charge, connect the USB plug into a power source and the DC charger into the charging port at the bottom of the toy's base. The indicator light will flash while device is charging and stay constant when toy is fully charged.

Charges will take about 80 minutes to complete.

Charge lasts for about 50 minutes of play time at the lowest speed, and 40 minutes at the fastest speed. This toy operates at a sound level of less than 50db with a rechargeable lithium battery at a voltage of 3.7V. The remote control is not

rechargeable. It uses 1 x AAA battery, not included.

through 3 speeds & 7 patterns. 3. Once the toy is in standby, to use remote press the + button to begin the first

INSTRUCTIONS FOR USE



function. Continue to press to cycle up thru functions. Press the - button to cycle down thru functions. Press the power button to return the toy to

standby.

4. To turn the toy off, press the button for at least 2 seconds. Vibration will stop and the light will turn off. NOTE: The remote cannot turn the toy on or off by itself. Use the toy's button to turn on initially and off completely.