

# PLAYBOY

Pleasure

PRODUCT SPECIFICATIONS:	
MATERIAL: SILICONE & ABS	
FUNCTIONS: 10 SPEEDS & RHYTHMS	
BATTERY: LI-ION BATTERY	VOLTAGE: 3.7 - 4.2V
USER TIME: 50 MINUTES	SOUND LEVEL: <50DB

INSERT CHARGING  
PIN INTO SLOT



**CHARGING INSTRUCTIONS:** It is recommended to charge this toy before use. The toy charges by placing it inside the charging case, which, once fully charged itself, holds enough power for two full toy charges.

To charge the case, connect the USB cable provided into a power source at one end and the other end into the port at the case's base. The indicator light on the case will turn red while device is charging and turn green when toy is fully charged. Charging will take about 80 minutes to complete. Once charged, the base can charge the toy wirelessly two times.

To charge the toy, place the toy into the charging case, connecting the magnet at the bottom of the toy with the charging port at the base of the case's interior. The toy's light will flash and remain solid when fully charged.

Charge lasts for about 50 minutes of play time with average use. This toy operates at a sound level of less than 55db with a rechargeable lithium battery at 3.7 - 4.2V.

#### INSTRUCTIONS FOR USE

1. The 1-button control panel is located at the side of the toy.
2. Press the button for 1.5 seconds to turn on toy. The button will light up and the motor will begin at its lowest frequency. Press again to cycle through 10 vibrating speeds and rhythms.
3. Press button again for 1.5 seconds to turn toy off. Light will turn off and vibrating will cease.

#### VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure - Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use.
3. Clean your vibrator after every use with Playboy Pleasure - Clean: Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

