

<http://www.genderx.com/>

GENDERX



Product Specifications:

Material: Silicone & ABS

Battery: Lithium Polymer

Voltage: 5V, 1A

Number of Vibrations: 8

User time: 45 - 50 Minutes

Sound Level: 55dB

CHARGING INSTRUCTIONS

It is recommended to charge battery fully before first use. To charge, connect the USB plug into a power source at one end and the DC charger into the charging port at the bottom of the toy's handle. The LED light will flash while the device is charging and remain solid when fully charged. Initial charge will take 2 hours, subsequent charges will take about an hour to complete.

Charge lasts for about 50 minutes of play time on the lowest vibration level, and about 45 minutes of play time on the highest level. This toy operates at a sound level of 55db with a lithium polymer battery at 5V.

INSTRUCTIONS FOR USE

1. The control button is located at the front of the toy's handle.
2. Press the button for 1.5 seconds to turn the toy on. The toy will vibrate twice, and the button will light up to indicate that the motor is in standby mode.
3. Press the button again more quickly to cycle through 8 vibrating speeds and patterns.
4. To turn the toy off, press the button for 2 seconds. The light will turn off and the motor will cease.
5. Start the remote control by pressing its button for 1 second, then press more quickly to cycle through 8 vibrating speeds and patterns and standby. Turn off the remote by pressing the button again for 2 seconds.
6. The remote cannot turn the toy on or off. The toy must be turned on and off with its own button directly.



USB RECHARGEABLE