

PRODUCT SPECIFICATIONS:	
MATERIAL: SILICONE	
FUNCTIONS: 9 VIBRATING SPEEDS & FUNCTIONS	
BATTERY: LITHIUM	VOLTAGE: 3.7 V
USER TIME: 50 - 95 MINUTES	SOUND LEVEL: ≤58DB



ATTACH USB
CHARGER
TO PRONGS

CHARGING INSTRUCTIONS: It is recommended to charge this toy before first use. To charge, connect the USB plug into a power source at one end and the DC end onto the charging pins on the round exterior of the cup, below the control button. The LED light flashes while the device is charging and remains solid when fully charged. Charges complete in about 80 minutes. Charge lasts about 95 minutes on the lowest power level and about 50 minutes at the highest level. This toy operates at a sound level of 58db with a 140mAh lithium battery at 3.7V.

INSTRUCTIONS FOR USE

1. Turn the toy on by pressing the button located on the outer shell of the cup for 3 seconds. The light will turn on and the cup will begin vibrating at its lowest speed.
2. Press the button again quickly to cycle through 9 speeds and patterns, then standby.
3. Press the button again for 3 seconds to turn toy completely off. All function and lights will cease.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Zero Tolerance - Lubricants as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use.
3. Clean your vibrator after every use with Zero Tolerance - Clean: Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

